


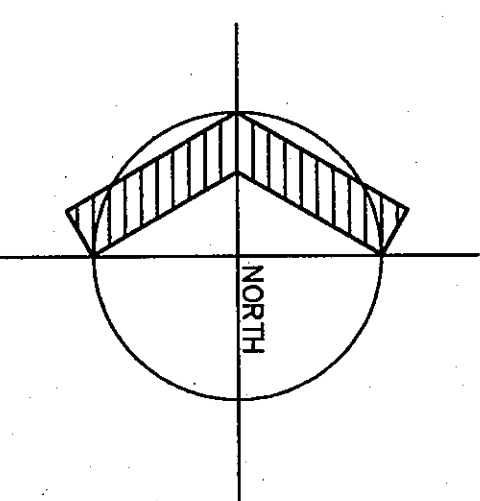

SCALE 1/8" = 1'-0"

PLAN NOTES:

- ① STRIP CARPET UP THE FLOOR AND INTO CHASE OF CLASSROOM. MOUNT TELEPHONE COMPUTER BACKBOX AT 16 INCHES ABOVE FINISH FLOOR. SEE DETAIL 6/11.10.
- ② PROVIDE A DOUBLE GANG 3.5 INCH DEEP JUNCTION BOX FOR FUTURE RADIO STUDIO PHONE LINE. PROVIDE 16 INCH DEEP JUNCTION BOX FOR FUTURE DATA. PROVIDE A PULL STRING FOR FUTURE USE.
- ③ PROVIDE FLOOR BOX WITH THREE RECEPTACLES AND TWO BLANK PLATES FOR FUTURE DATA OUTLETS.
- ④ RUN ALL PRO-SOUND SPEAKERS AND MICROPHONE JACKS IN CLOSET TO PATCH PANEL. SEE DETAIL 10/11.10.